User Guide

Vax Careline: (UK) 0844 412 8455
(ROI) 1-800 928 308

Handheld

H89-12V Series
H88-12V Series

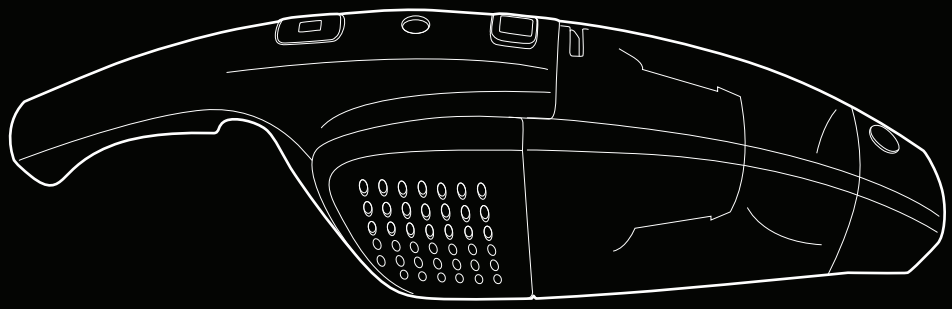

Get Cleaning...

What's your Vax model number? (Located on the top flap of the packaging)

e.g. H89-12V-B-A

What's your serial number? (Located on the base of the machine)

Note these down in case you need them in future. Please keep instructions for further use.

Machine Overview

1. Nozzle release button
2. Dirt container
3. Filter
   a) filter shroud
   b) filter
4. Dirt container release button
5. Charging indicator (blue LED)
6. On/off switch
7. Charging connection point
8. Charger
9. Dusting brush
10. Crevice tool

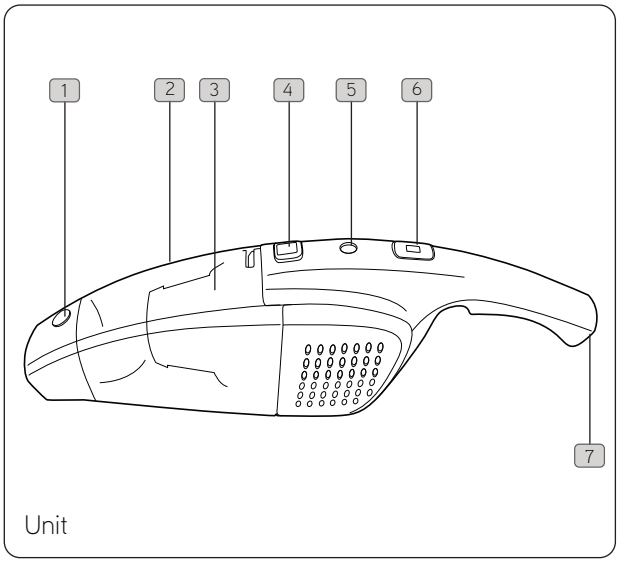

Unit

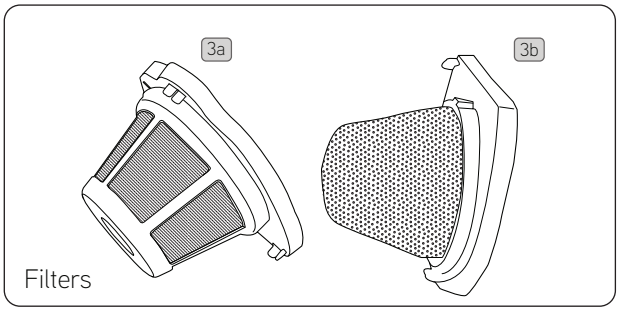

Filters

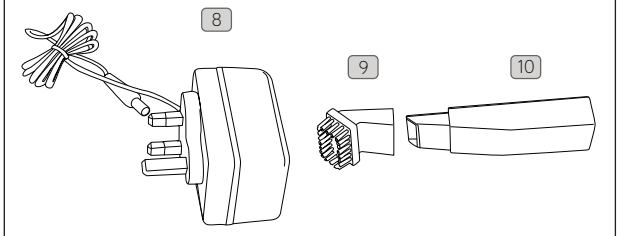

Accessories

Vax Careline: (UK) 0844 412 8455
(ROI) 1-800 928 308

General Safety Information

FOR HOUSEHOLD USE ONLY.

When using the handheld, basic safety precautions should always be observed, including the following:

WARNING: Do not use outdoors or on wet surfaces.

1. Do not charge the unit outdoors.
2. Turn off the handheld before connecting or disconnecting from the mains supply.
3. Children should be supervised to ensure that they do not play with the appliance.
4. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by person responsible for their safety.
5. Use only as described in this manual. Only use the manufacturer's recommended attachments.
6. Do not use the handheld vacuum if it has been dropped, damaged, left outdoors, or dropped into water. Do not use the charger with a damaged cord or plug. If the charger is damaged, it must be replaced by the manufacturer or a recommended Service Agent to avoid hazard and invalidating the guarantee.
7. Do not abuse the cord. Keep the cord away from heated surface. Do not pull the cord around sharp edges or corners. Do not close the cord in a door.
8. Do not handle the plug or appliance with wet hands.
9. Do not throw batteries into fire or expose them to high temperatures, as they may burst.
10. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce airflow.
11. Keep hair, loose clothing, fingers and all parts of the body away from openings and moving parts.
12. Do not pick up hot coals, cigarette butts, matches or anything hot, smoking or burning objects.
13. Do not pick up flammable or combustible materials (lighter fluid, petrol, kerosene, etc) or use in the presence of explosive liquids or vapour.
14. Do not vacuum up harmful or toxic material (chlorine bleach, ammonia, drain cleaner, etc).
15. Do not use without the filter in place.
16. Do not vacuum up hard or sharp objects such as glass, nails, screws, coins, etc.
17. Turn off all controls before unplugging.
18. Take extra care when cleaning on stairs.
19. Store the appliance indoors in a cool, dry area.
20. Only use the charger supplied by the manufacturer to recharge.

IMPORTANT: For dry debris use only.

WARNING: Always switch off and unplug the handheld from the electrical outlet before assembling, opening or emptying the dirt container, or before connecting/disconnecting the attachments or performing any maintenance.

IMPORTANT: Remove the battery from the appliance before recycling. For further information please contact your local waste management centre.

This handheld is intended for household use only and NOT for commercial or industrial use.

PLEASE KEEP INSTRUCTIONS FOR FURTHER USE.

Operation

Charging and operation

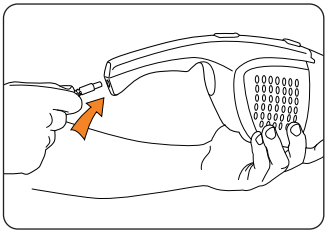

Plug charger into the mains and insert lead into back of unit.

NOTE: The initial charging time is 15 hours. While charging, the indicator will remain a steady blue. Once fully charged, the light will flash.

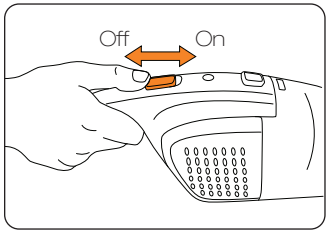

On/off switch.

Tools

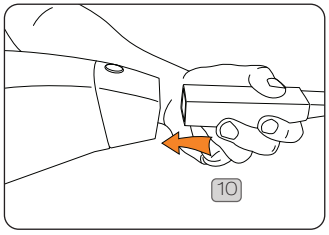

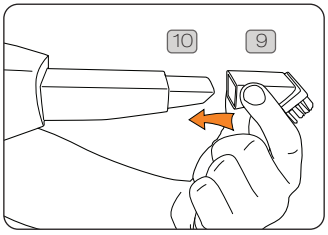

The crevice tool can be attached directly onto the nozzle. To use the dusting brush, attach to the crevice tool.

Emptying the dirt container

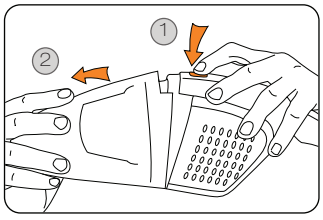

To open, press release button to remove the dirt container.

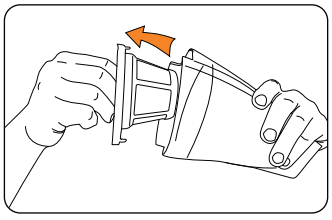

Remove filter.

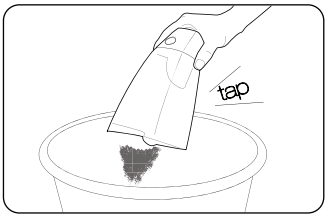

Empty over a bin.

Vax Careline: (UK) 0844 412 8455
(ROI) 1-800 928 308

Maintenance (Keep your Vax as good as new)

Dirt container and filter maintenance

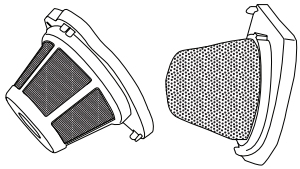

IMPORTANT: The condition of the filter affects the performance of your machine. Please check and clean the filter periodically (depending on the level of use).

IMPORTANT: Do not use the handheld without the filter in place.

Cleaning the filter

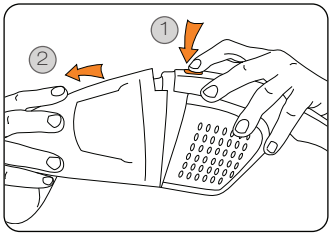

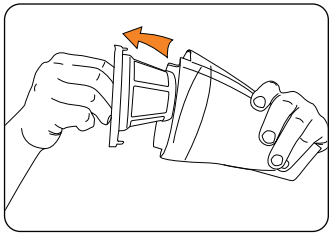

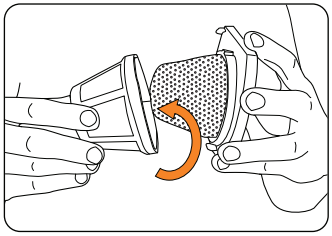

Turn anti-clockwise to separate the filters.

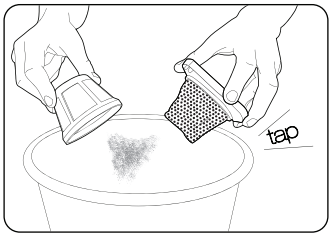

Tap filters against bin.

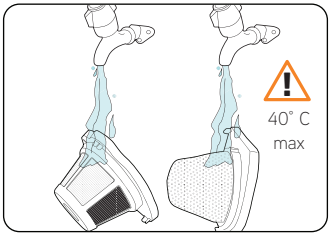

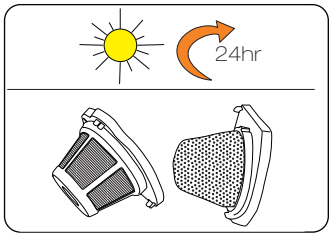

Maintenance (Keep your Vax as good as new)

Cleaning the nozzle

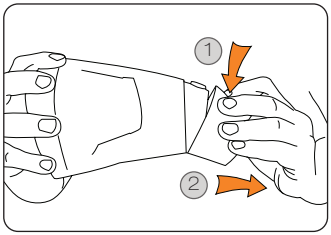

To open, press release button and pull nozzle away from dirt container.

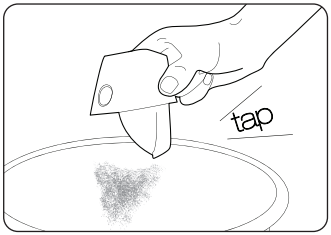

Shake excess dirt from dirt container. Tap nozzle against bin.

To re-attach nozzle and dirt container

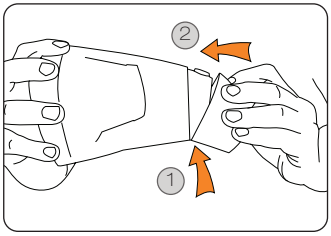

Align bottom of nozzle with dirt container and clip on.

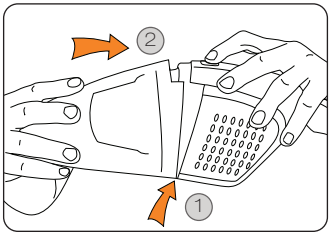

Align bottom of dirt container with main body and clip on.

NOTE: An audible 'click' can be heard when the nozzle and dirt container are re-attached correctly.

NOTE: Please ensure filter is located back in position when re-attaching nozzle and dirt container.

Vax Careline: (UK) 0844 412 8455
(ROI) 1-800 928 308

Maintenance (Keep your Vax as good as new)

Battery maintenance

Disposal

IMPORTANT: The handheld vacuum contains a battery that must not be disposed of in your domestic waste. Check with your Local Authority for recycling advice.

Removing the battery

- Never short-circuit the battery, i.e. never touch both poles simultaneously, especially with metal objects.
- Never dismantle the battery.
- Never expose the battery to high temperatures.
- Improper handling can lead to liquid leaking from the battery. This can cause skin irritations. Avoid any contact with the fluid.
- If it becomes necessary to replace the battery, contact the Vax Careline.
- Do not replace the battery with a battery of a different type.

FAQs

WARNING: to reduce the risk of personal injury, unplug the handheld before performing maintenance/troubleshooting checks.

Why will the handheld not run?

- The battery may not be charged. To charge the battery, the power switch must be in the 'off' position. The static blue light shows the unit is charging. The initial charge should be for 15 hours.
- For further assistance, please call us on: **0844 412 8455.**

Why won't the handheld pick up?

- The nozzle or crevice tool may be blocked; remove the obstruction.
- The filter may be clogged or dirty; clean the filter. Refer to the Maintenance section.
- The battery charge is getting weak; let the battery run until it stops and recharge.
- The dirt container is full; empty the container.
- For further assistance, please call us on: **0844 412 8455.**

Why won't the battery recharge?

- The charger may not be inserted correctly.
- Check the mains power is switched on.
- The electrical outlet may not be working; check the fuse or breaker and consult an electrician.
- For further assistance, please call us on: **0844 412 8455.**

we're here to help

Instead of taking me back to the shop, simply call:

(UK) 0844 412 8455
(ROI) 1-800 928 308

vax.co.uk
vaxireland.ie

This does not affect your statutory rights

Other Information

UK Service & Help

Vax Careline:

(UK) 0844 412 8455

(ROI) 1-800 928 308

Monday - Friday 8.30am to 6.30pm

Saturday - Sunday 9.00am to 5.00pm

If you have queries or concerns about using your Vax, call the Vax Careline. Calls are charged at the UK local rate. Please make a note of the serial number and model number of the vacuum cleaner before calling. For the nearest Service Agent, please call the Vax Careline or visit **vax.co.uk**

Consumables

To purchase spares and accessories, please visit **vax.co.uk**

Charger:	1-5-130978-00
Brush tool:	1-9-130979-00
Flat nozzle tool:	1-9-130980-00
Filter kit:	1-1-131148-00

Guarantee will only be valid with the use of genuine Vax spares and accessories.

Technical Specification

Part number:	1-1-130732-00, 1-1-131092-00, 1-1-131879-00
Barcode:	5 01251213170 2, 5 01251213249 5, 5 01251213517 5
Battery voltage:	12V
Capacity:	0.7L
Runtime:	15 mins
Weight:	1.3kg
Charger input wattage:	230-240V-50Hz
Charging time:	15 hours
Filter type:	Washable

Subject to technical change without notice.

EEC Statement of Compliance

Manufacturer/EEC importer: Vax Limited, hereby on our own responsibility, declare that the H88-12V, H89-12V series is manufactured in compliance with the following Directives:

Safety: 2006/95/EC Low Voltage Directive
EMC: 2004/108/EC Electromagnetic Compatibility Directive

Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.

Notes

Vax Careline: (UK) 0844 412 8455
(ROI) 1-800 928 308

Notes

Vax Ltd., Kingswood Road, Hampton Lovett, Droitwich, Worcestershire, WR9 0QH, UK
email: info@vax.co.uk - website: vax.co.uk

Version 1.0